


# Trol-Lok™ Installation Instructions for Minn Kota™ Fortrex Trolling Motors



1. Raise the trolling motor and drill a ¼" Diameter hole as shown in the mounting bracket of the trolling motor.

**Approx. 1" back drill a ¼" Dia. Hole**

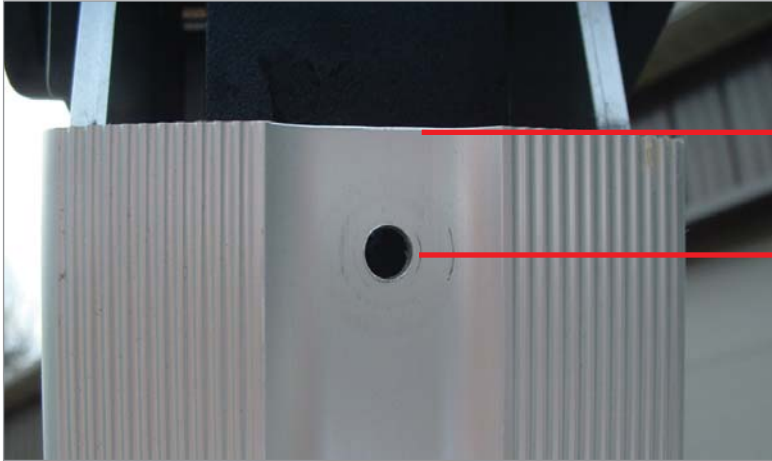

2. Install the lock down rod onto the trolling motor bracket. (Note: Rubber washer goes against the lock down rod with the rubber portion facing the lock down rod.)



**Rubber backed Washer**